



**EN** Operating instructions. . . . .pages 1 to 8  
Original

## Content

|                                                                   |   |
|-------------------------------------------------------------------|---|
| <b>1 About this document</b>                                      |   |
| 1.1 Function . . . . .                                            | 1 |
| 1.2 Target group: authorised qualified personnel. . . . .         | 1 |
| 1.3 Explanation of the symbols used . . . . .                     | 1 |
| 1.4 Appropriate use . . . . .                                     | 1 |
| 1.5 General safety instructions . . . . .                         | 1 |
| 1.6 Warning about misuse . . . . .                                | 1 |
| 1.7 Exclusion of liability . . . . .                              | 2 |
| <b>2 Product description</b>                                      |   |
| 2.1 Ordering code . . . . .                                       | 2 |
| 2.2 Special versions. . . . .                                     | 2 |
| 2.3 Purpose . . . . .                                             | 2 |
| 2.4 Technical data . . . . .                                      | 3 |
| 2.5 Safety classification of the interlocking function. . . . .   | 3 |
| 2.6 Safety classification of the guard locking function . . . . . | 3 |
| <b>3 Mounting</b>                                                 |   |
| 3.1 General mounting instructions . . . . .                       | 4 |
| 3.2 Dimensions . . . . .                                          | 4 |
| 3.3 Mounting of the actuator . . . . .                            | 4 |
| <b>4 Electrical connection</b>                                    |   |
| 4.1 General information for electrical connection. . . . .        | 5 |
| 4.2 Contact variants. . . . .                                     | 5 |
| <b>5 Set-up and maintenance</b>                                   |   |
| 5.1 Functional testing. . . . .                                   | 6 |
| 5.2 Maintenance . . . . .                                         | 6 |
| <b>6 Disassembly and disposal</b>                                 |   |
| 6.1 Disassembly. . . . .                                          | 6 |
| 6.2 Disposal . . . . .                                            | 6 |
| <b>7 EU Declaration of conformity</b>                             |   |

## 1. About this document

### 1.1 Function

This operating instructions manual provides all the information you need for the mounting, set-up and commissioning to ensure the safe operation and disassembly of the safety switchgear. The operating instructions must be available in a legible condition and a complete version in the vicinity of the device.

### 1.2 Target group: authorised qualified personnel

All operations described in this operating instructions manual must be carried out by trained specialist personnel, authorised by the plant operator only.

Please make sure that you have read and understood these operating instructions and that you know all applicable legislations regarding occupational safety and accident prevention prior to installation and putting the component into operation.

The machine builder must carefully select the harmonised standards to be complied with as well as other technical specifications for the selection, mounting and integration of the components.

### 1.3 Explanation of the symbols used



#### Information, hint, note:

This symbol is used for identifying useful additional information.



**Caution:** Failure to comply with this warning notice could lead to failures or malfunctions.

**Warning:** Failure to comply with this warning notice could lead to physical injury and/or damage to the machine.

### 1.4 Appropriate use

The Schmersal delivery programme is not intended for private consumers.

The products described in these operating instructions are developed to execute safety-related functions as part of an entire plant or machine. It is the responsibility of the manufacturer of a machine or plant to ensure the correct functionality of the entire machine or plant.

The safety switchgear must be exclusively used in accordance with the versions listed below or for the applications authorised by the manufacturer. Detailed information regarding the range of applications can be found in the chapter "Product description".

### 1.5 General safety instructions

The user must observe the safety instructions in this operating instructions manual, the country specific installation standards as well as all prevailing safety regulations and accident prevention rules.



Further technical information can be found in the Schmersal catalogues or in the online catalogue on the Internet: [products.schmersal.com](https://products.schmersal.com).

The information contained in this operating instructions manual is provided without liability and is subject to technical modifications.

There are no residual risks, provided that the safety instructions as well as the instructions regarding mounting, commissioning, operation and maintenance are observed.

### 1.6 Warning about misuse



In case of improper use or manipulation of the safety switchgear, personal hazards or damages to machinery or plant components cannot be excluded. The relevant requirements of the standard EN ISO 14119 must be observed.

1.7 Exclusion of liability

We shall accept no liability for damages and malfunctions resulting from defective mounting or failure to comply with this operating instructions manual. The manufacturer shall accept no liability for damages resulting from the use of unauthorised spare parts or accessories.

For safety reasons, invasive work on the device as well as arbitrary repairs, conversions and modifications to the device are strictly forbidden, the manufacturer shall accept no liability for damages resulting from such invasive work, arbitrary repairs, conversions and/or modifications to the device.

2. Product description

2.1 Ordering code

This operating instructions manual applies to the following types:

AZM 161 ①-②③④-⑤⑥-⑦⑧-⑨

| No. | Option  | Description                        |
|-----|---------|------------------------------------|
| ①   | CC      | Cage clamps                        |
|     | SK      | Screw terminals                    |
|     | ST      | M12 x 1 connector                  |
| ②   | 11 / 03 | 1 NO / 4 NC contact with connector |
|     | 11 / 12 | 2 NO / 3 NC contact with connector |
|     | 12 / 03 | 1 NO / 5 NC                        |
|     | 12 / 11 | 2 NO / 3 NC contact with connector |
|     | 12 / 12 | 2 NO / 4 NC                        |
| ③   | R       | Latching force 5 N                 |
|     |         | Latching force 30 N                |
| ④   | A       | Power to unlock                    |
|     |         | Power to lock                      |
| ⑤   |         | Lateral manual release             |
|     |         | Manual release on the cover side   |
| ⑥   |         | Manual release on the rear side    |
|     |         | Lateral emergency exit             |
| ⑦   |         | Emergency exit on the cover side   |
|     |         | Emergency exit on the rear side    |
| ⑧   |         | Emergency release                  |
|     |         | U <sub>s</sub> 24 VAC/DC           |
| ⑨   |         | U <sub>s</sub> 110/230 VAC         |
|     |         | Without LED                        |
| ⑩   |         | With LED (24 V only)               |
|     |         | Actuator B1 included               |
| ⑪   |         | Actuator B1E included              |
|     |         | Actuator B6 left included          |
| ⑫   |         | Actuator B6 right included         |
|     |         | Actuator B1-1747 included          |
| ⑬   |         | Actuator B1-2024 included          |
|     |         | Actuator B1-2053 included          |
| ⑭   |         | Actuator B1-2177 included          |

⚠ Only if the information described in this operating instructions manual are realised correctly, the safety function and therefore the compliance with the Machinery Directive is maintained.

2.2 Special versions

For special versions, which are not listed in the order code below 2.1, these specifications apply accordingly, provided that they correspond to the standard version.

2.3 Purpose

The solenoid interlock has been designed to prevent in conjunction with the control part of a machine, movable safety guards from being opened before hazardous conditions have been eliminated. The AZM 161 I solenoid interlocks with individual coding offer a higher protection against tampering.

i The safety switchgear units are classified as type 2 interlocking devices in accordance with EN ISO 14119 and are rated as highly coded.




Interlocks with power to lock principle may only be used in special cases after a thorough evaluation of the accident risk, since the safety guard can be opened immediately on failure of the power supply or upon activation of the main switch.

Manual release


(for set-up, maintenance, etc.)

The manual release is realised by turning the triangular key, so that the locking bolt is pulled into the unlocking position. The normal locking function is only restored after the triangular key has been returned to its original position. After being put into operation, the manual release must be secured by installing the plastic cover, which is included in delivery.

Lateral manual release

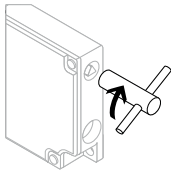

Manual release on the cover side or on the rear side  
(ordering suffix -ED/-EU)

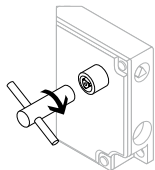

Triangular key TK-M5 (101100887) available as accessory.


Emergency release (ordering suffix -N)

(Fitting only from outside the hazardous area)



The emergency release should only be used in an emergency.  
The solenoid interlock should be installed and/or protected so that an inadvertent opening of the interlock by an emergency release can be prevented.  
The emergency release must be clearly labelled that it should only be used in an emergency. The label can be used that was included in the delivery.

To activate the emergency release in case of an emergency, the orange lever must be turned to the stop in the direction marked by the arrow. In this position, the safety guard can be opened. The lever is latched and cannot be returned to its original position. To cancel the blocking condition, the central mounting screw must be loosened to such extent that the lever can be turned back into its original position. The screw must then be re-tightened.




Emergency exit


(Fitting and actuation only from within the hazardous area)

To activate the emergency exit of the T version in case of an emergency, the orange lever must be turned to the stop in direction marked by the arrow. The emergency exit function of the TD and TU versions is activated by pressing the red pushbutton. In this position, the safety guard can be opened. The blocking condition is cancelled by turning the lever in opposite direction or by pulling back the pushbutton. In unlocked position, the safety guard is protected against unintentional closing.

Lateral emergency exit  
(ordering suffix -T)



Emergency exit on the cover side or on the rear side  
(ordering suffix -TD/-TU)





The user must evaluate and design the safety chain in accordance with the relevant standards and the required safety level.



The entire concept of the control system, in which the safety component is integrated, must be validated to the relevant standards.

### 2.4 Technical data

|                                               |                                                                                            |
|-----------------------------------------------|--------------------------------------------------------------------------------------------|
| Standards:                                    | DIN EN 60947-5-1, EN ISO 14119                                                             |
| Enclosure:                                    | glass-fibre reinforced thermoplastic, self-extinguishing                                   |
| Actuator and locking bolt:                    | stainless steel 1.4301                                                                     |
| Holding force:                                |                                                                                            |
| - $F_{Zh}$ :                                  | 2,000 N                                                                                    |
| - $F_{max}$ :                                 | 2,600 N                                                                                    |
| Latching force:                               | 30 N for ordering suffix R                                                                 |
| Coding level according to EN ISO 14119:       | high                                                                                       |
| Degree of protection:                         | IP67                                                                                       |
| Contact material:                             | Silver                                                                                     |
| Contact type:                                 | Change-over contact with double break type Zb, with galvanically separated contact bridges |
| Switching system:                             | ⊖ acc. DIN EN 60947-5-1 slow action, NC contact with positive break                        |
| Connection:                                   | screw terminals or cage clamps or connector                                                |
| Cable type:                                   | rigid single-wire or flexible                                                              |
| Cable section:                                | 0.25 ... 1.5 mm <sup>2</sup><br>(incl. conductor ferrules)                                 |
| Cable entry:                                  | 4 x M16 x 1.5                                                                              |
| Positive break travel (unlocked):             | 10 mm                                                                                      |
| Positive break force (unlocked):              | 10 N for each NC contact fitted                                                            |
| Actuating speed:                              | max. 2 m/s                                                                                 |
| Actuating frequency:                          | max. 1,000 operations/h                                                                    |
| Mechanical life:                              | > 1.000.000 operations                                                                     |
| Ambient temperature:                          | -25 °C ... +60 °C                                                                          |
| <b>Electrical data:</b>                       |                                                                                            |
| Utilisation category:                         | AC-15, DC-13                                                                               |
| Rated operating current / voltage $I_N/U_N$ : | 4 A / 230 VAC<br>4 A / 24 VDC                                                              |
| - ST 4-pole:                                  | 4 A / 230 VAC<br>4 A / 24 VDC                                                              |
| - ST 8-pole:                                  | 2 A / 24 VDC                                                                               |
| Rated impulse withstand voltage $U_{imp}$ :   | 4 kV                                                                                       |
| - Connector ST 4-pole:                        | 2.5 kV                                                                                     |
| - Connector ST 8-pole:                        | 0.8 kV                                                                                     |
| Rated insulation voltage $U_i$ :              | 250 V                                                                                      |
| - Connector ST 4-pole:                        | 250 V                                                                                      |
| - Connector ST 8-pole:                        | 60 V                                                                                       |
| Thermal test current $I_{the}$ :              | 6 A                                                                                        |
| - Connector 4-pole:                           | 4 A                                                                                        |
| - Connector 8-pole:                           | 2 A                                                                                        |
| Max. fuse rating:                             | 6 A gG D-fuse                                                                              |
| - Connector 4-pole:                           | 4 A gG D-fuse                                                                              |
| - Connector 8-pole:                           | 2 A gG D-fuse                                                                              |
| Required rated short-circuit current:         | 1,000 A                                                                                    |
| Rated control voltage $U_c$ :                 | 24 VDC<br>24 VAC / 50/60 Hz<br>110 VAC / 50/60 Hz<br>230 VAC / 50/60 Hz                    |

### Electrical data – Magnet control:

|                                               |           |
|-----------------------------------------------|-----------|
| Magnet switch-on time:                        | 100 %     |
| Power consumption:                            | max. 10 W |
| Accepted test pulse duration on input signal: | ≤ 5.0 ms  |
| - With test pulse interval of:                | ≥ 50 ms   |



Use Type 4X (Indoor Use) and 12 connector fittings.  
Tightening torque rating: 4.4 lb in.

### 2.5 Safety classification of the interlocking function

Standards: EN ISO 13849-1

Envisaged structure:

- Basically: applicable up to Cat. 1 / PL c
- With 2-channel usage and fault exclusion mechanism\*: applicable up to Cat. 3 / PL d with suitable logic unit

$B_{10D}$  NC contact:

- Mechanical life: 2,000,000
- Electrical life: on request

$B_{10D}$  NO contact at 10% ohmic contact load: 1,000,000

Mission time: 20 years

\* If a fault exclusion to the 1-channel mechanics is authorised.

$$MTTF_D = \frac{B_{10D}}{0.1 \times n_{op}} \quad n_{op} = \frac{d_{op} \times h_{op} \times 3600 \text{ s/h}}{t_{cycle}}$$

(Determined values can vary depending on the application-specific parameters  $h_{op}$ ,  $d_{op}$  and  $t_{cycle}$  as well as the load.)

If multiple safety components are wired in series, the Performance Level to EN ISO 13849-1 will be reduced due to the restricted error detection under certain circumstances.

### 2.6 Safety classification of the guard locking function

If the device is used as an interlock for personal safety, a safety classification of the guard locking function is required. When classifying the interlock function, a distinction must be made between monitoring of the interlock function (locking function) and controlling the unlocking function.

The following safety classification of the unlocking function is based on the application of the principle of safety energy disconnection for the solenoid supply




The classification of the release function is only valid for devices with monitored guard locking function and in the power to unlock version (see ordering code).

A fault exclusion for the guard locking function can be assumed by an external safety energy disconnection.

In this case, the guard locking function does not have an effect on the failure probability of the unlock function.

The safety level of the unlock function is determined exclusively by the external safety power shutdown.

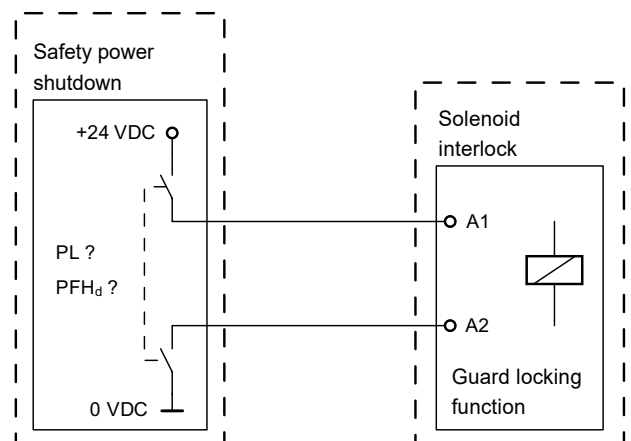

Fault exclusion with regard to wiring routing must be observed.



If for a certain application the power to unlock version of a solenoid interlock cannot be used, for this exception an interlock with power to lock can be used if additional safety measure need to be realised that have an equivalent safety level.

## 3. Mounting

### 3.1 General mounting instructions



On delivery, the actuator is in inserted condition. For power-to-unlock components, the actuator must be released by means of the manual release. On delivery, the actuator is in inserted condition. For power-to-unlock components, the actuator must be released by means of the manual release. If the triangular key is turned 180°, the locking bolt is pulled into the unlocking position. The normal locking function is only restored after the triangular key has been returned to its original position.

Three mounting holes are provided for fixing the enclosure. The solenoid interlock is double insulated. The use of an earth wire is not authorised. The solenoid interlock must not be used as an end stop. Any mounting position. The mounting position however must be chosen so that the ingress of dirt and soiling in the used opening is avoided. Unused actuator openings must be sealed with slot sealing plugs.



The actuator must be permanently fitted to the safety guards and protected against displacement by suitable measures (tamperproof screws, gluing, drilling of the screw heads).




Please observe the remarks of the standards EN ISO 12100, EN ISO 14119 and EN ISO 14120.

### 3.2 Dimensions

All measurements in mm.


#### Solenoid interlock AZM 161

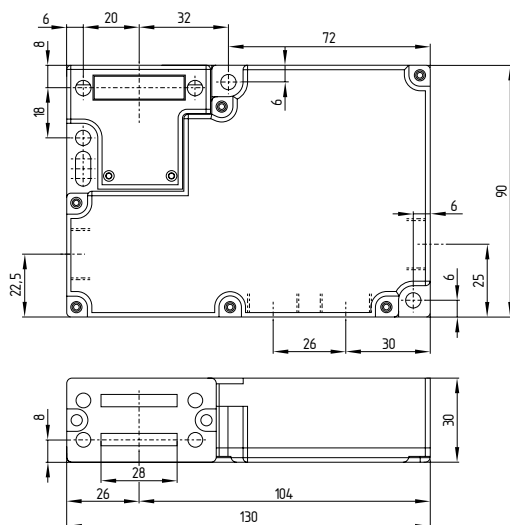


### Actuator

(included in delivery)


#### Straight actuator B1

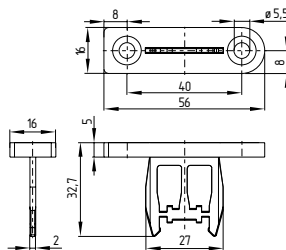


#### Straight actuator B1E

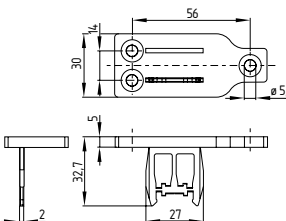


#### Flexible actuator B6L

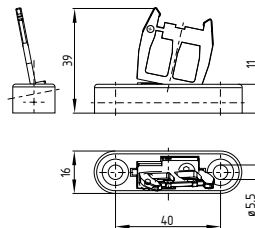


#### Actuator B1-2053 with ball latch

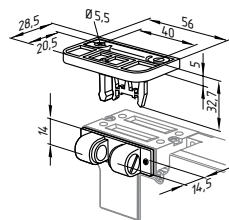


#### B1-1747 Straight design with magnetic latch

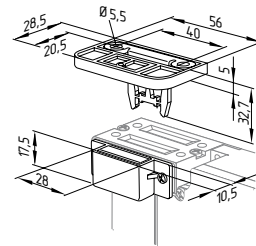


#### Actuator B1-2024 with slot lip-seal

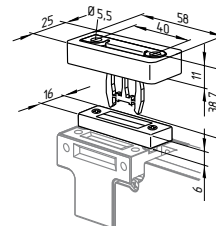

#### Flexible actuator B6R

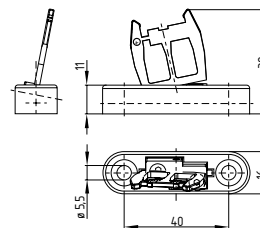


#### Actuator B1-2177 with centering guide

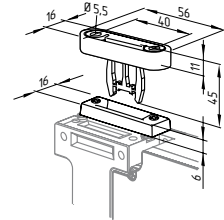

### 3.3 Mounting of the actuator



The marks on the used actuator opening of the solenoid interlock and on the actuator must be opposite.

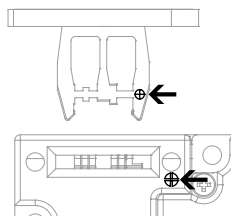


Use tamper-proof screws (available as accessory) to prevent unauthorised unscrewing. Please observe that, when fixing the switch e.g. by means of rivetting or welding, the insertion depth of the actuator is not modified. Different actuator models are available: for sliding and removable safety guards, preferably use the AZM 161-B1 and AZM 161-B1E actuator. For hinged guards, the AZM 161-B6L or AZM 161-B6R actuator.

When the switch is fitted on a hinged safety guard, please ensure that the point of rotation is located within the range of the upper surface of the safety switch, in which the actuator hook is inserted (refer to table).

| Actuating radii |                        |                          |           |                          |           |
|-----------------|------------------------|--------------------------|-----------|--------------------------|-----------|
|                 |                        | R <sub>min</sub><br>[mm] | d<br>[mm] | R <sub>min</sub><br>[mm] | d<br>[mm] |
|                 | <b>AZM 161-B6L</b>     | 95                       | 11        | 95                       | 11        |
|                 | <b>AZM 161-B6R</b>     | 95                       | 11        | 95                       | 11        |
|                 | <b>AZM 161 B1</b>      | —                        | —         | —                        | —         |
|                 | <b>AZM 161 B1-1747</b> | —                        | —         | —                        | —         |
|                 | <b>AZM 161 B1-2024</b> | —                        | —         | —                        | —         |
|                 | <b>AZM 161 B1-2053</b> | —                        | —         | —                        | —         |
|                 | <b>AZM 161 B1-2177</b> | —                        | —         | —                        | —         |


### Key

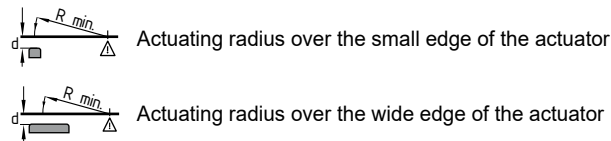

The axis of the hinge must be d mm above and in a parallel plane to the top surface of the safety switch. The basis setting provides a minimum radius of R<sub>min</sub>.

### Setting screw

The AZM 161-B6L or AZM 161-B6R actuator is set to the smallest radius in factory. To increase the radius, the setting screws a + b must be turned by means of a hexagonal key A/F 2.0 mm.

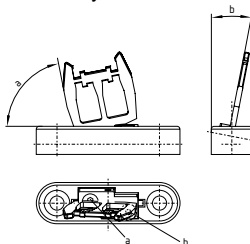

## 4. Electrical connection

### 4.1 General information for electrical connection




The electrical connection may only be carried out by authorised personnel in a de-energised condition.



If the risk analysis indicates the use of a monitored interlock they are to be connected in the safety circuit with the contacts indicated with the symbol

Appropriate cable glands with a suitable degree of protection are to be used. Remove the walls of the mounting holes by inserting the cable entry.



Puncturing the wall of the holes with auxiliary tools (e.g. screwdriver) can cause damage.

### Settle length x of the conductor:

- on cage clamps (CC) of type s or f: 5 ... 6 mm
- on screw terminals (SK): 7 mm



Information for the selection of suitable safety-monitoring modules can be found in the Schmersal catalogues or in the online catalogue on our website: [products.schmersal.com](http://products.schmersal.com).


### 4.2 Contact variants

Contacts are shown in the de-energised condition and with the actuator inserted.

#### Power to unlock

**AZM 161SK-12/12...**

**AZM 161CC-12/12...**

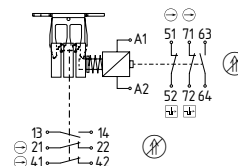


13 14 21 22 41 42 51 52 63 64 71 72 A1 A2

#### Power to lock

**AZM 161SK-12/12...A...**


**AZM 161CC-12/12...A...**

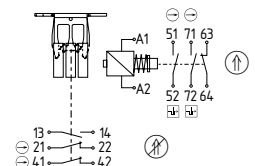

13 14 21 22 41 42 51 52 63 64 71 72 A1 A2

**AZM 161SK-12/03...**


**AZM 161CC-12/03...**

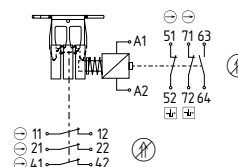

11 12 21 22 41 42 51 52 63 64 71 72 A1 A2

**AZM 161SK-12/03...A...**

**AZM 161CC-12/03...A...**

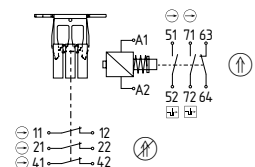


11 12 21 22 41 42 51 52 63 64 71 72 A1 A2

### Key


- Positive break NC contact
- Monitoring the interlock according to EN ISO 14119
- Actuated
- Not actuated

AZM 161ST-../... with connector


AZM 161ST-12/11...

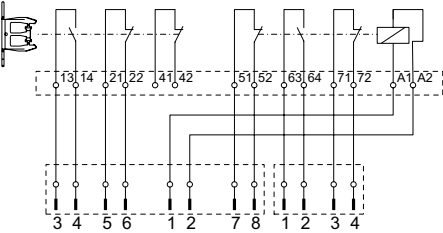


AZM 161ST-11/12...

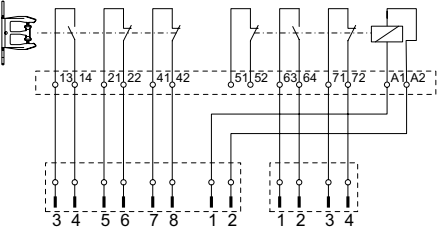

AZM 161ST-11/03...

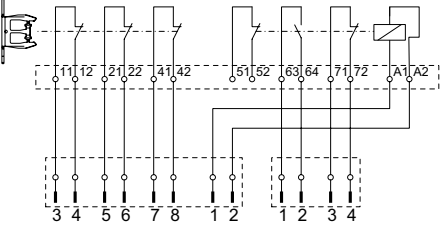

AZM 161...-G with LED

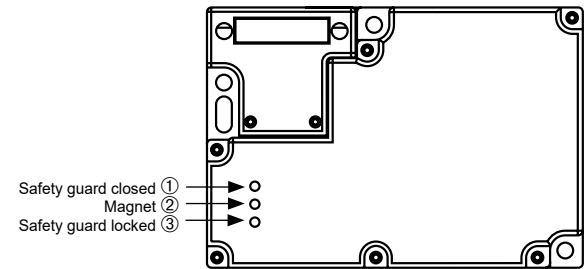


Integrated contact kit 12/12 G (with LED)



The 24 V are fed internally to contacts 13 and 63. The corresponding signals from the LED indicator can also be tapped at terminals 14 and/or 64.

Integrated contact kit 12/03 G (with LED)

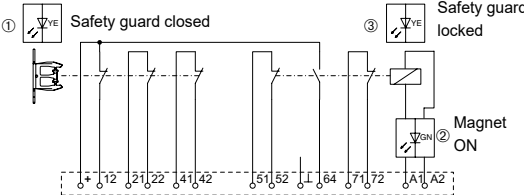

The 24 V are fed internally to contacts 11 and 63. The corresponding signals from the LED indicator can also be tapped at terminals 12 and/or 64.

Power to unlock

| System condition                                        | Solenoid control<br>Power to unlock | LED      |         |          |
|---------------------------------------------------------|-------------------------------------|----------|---------|----------|
|                                                         |                                     | yellow ① | green ② | yellow ③ |
| Guard open                                              | 24 V                                | Off      | On      | Off      |
| Door closed,<br>actuator inserted,<br><b>not locked</b> | 24 V                                | On       | On      | Off      |
| Guard closed,<br>actuator inserted<br><b>and locked</b> | 0 V                                 | On       | Off     | On       |

Power to lock

| System condition                                        | Solenoid control<br>Power to lock | LED      |         |          |
|---------------------------------------------------------|-----------------------------------|----------|---------|----------|
|                                                         |                                   | yellow ① | green ② | yellow ③ |
| Guard open                                              | 0 V                               | Off      | Off     | Off      |
| Door closed,<br>actuator inserted,<br><b>not locked</b> | 0 V                               | On       | Off     | Off      |
| Guard closed,<br>actuator inserted<br><b>and locked</b> | 24 V                              | On       | On      | On       |

5. Set-up and maintenance

5.1 Functional testing

The safety function of the safety components must be tested. The following conditions must be previously checked and met:

1. Fitting of the solenoid interlock and the actuator
2. Check the integrity of the cable entry and connections
3. Check the switch enclosure for damage

5.2 Maintenance

A regular visual inspection and functional test, including the following steps, is recommended:

1. Check for tight installation of the actuator and the switch
2. Remove particles of dust and soiling
3. Check cable entry and connections



Throughout the operative life cycles of the safety switchgear, suitable constructive and organisational measures are to be taken to prevent against tampering and to prevent the safety device being overridden.

Damaged or defective components must be replaced.

6. Disassembly and disposal

6.1 Disassembly

The safety switchgear must be disassembled in a de-energised condition only.

6.2 Disposal

The safety switchgear must be disposed of in an appropriate manner in accordance with the national prescriptions and legislations.

7. EU Declaration of conformity

EU Declaration of conformity



Original

K.A. Schmersal GmbH & Co. KG  
Möddinghofe 30  
42279 Wuppertal  
Germany  
Internet: [www.schmersal.com](http://www.schmersal.com)

We hereby certify that the hereafter described components both in their basic design and construction conform to the applicable European Directives.

Name of the component:

AZM 161 I

Type:

See ordering code

Description of the component:

Interlocking device with electromagnetic interlock for safety functions

Relevant Directives:

Machinery Directive2006/42/EC

EMC-Directive2014/30/EU

RoHS-Directive2011/65/EU

Applied standards:

DIN EN 60947-5-1:2018  
EN ISO 14119:2013


Person authorised for the compilation of the technical documentation:

Oliver Wacker  
Möddinghofe 30  
42279 Wuppertal

Place and date of issue:

Wuppertal, November 9, 2021

AZM161I-F-EN

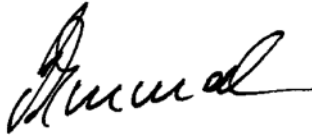  
Authorised signature  
**Philip Schmersal**  
Managing Director



The currently valid declaration of conformity can be downloaded from the internet at [products.schmersal.com](http://products.schmersal.com).



**K.A. Schmersal GmbH & Co. KG**  
Möddinghofe 30, 42279 Wuppertal  
Germany  
Phone: +49 202 6474-0  
Telefax: +49 202 6474-100  
E-Mail: [info@schmersal.com](mailto:info@schmersal.com)  
Internet: [www.schmersal.com](http://www.schmersal.com)